






1.
Scan the QR code
download the SolarUnit APP

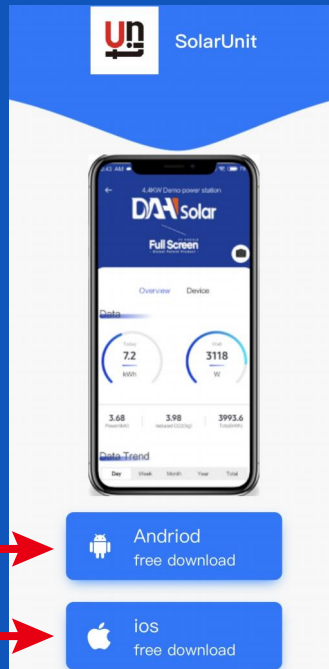


2.
Download different versions
as needed
Click the blue button below
to start the download

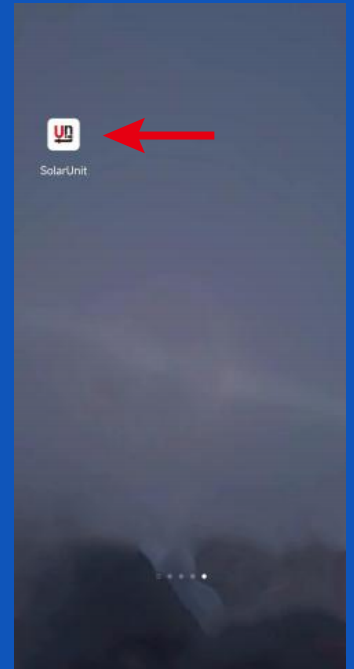


3.
Open the SolarUnit App
after the installation is complete

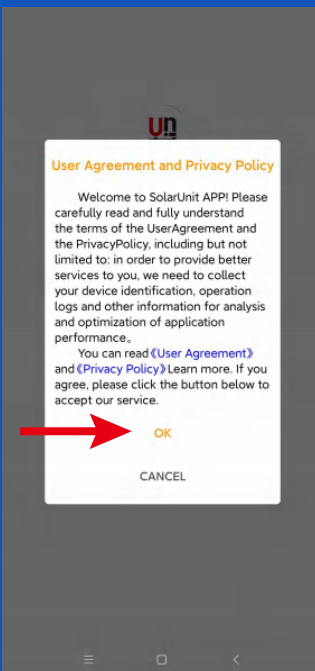


4.
Read the "User Agreement" and "
Privacy Policy" carefully, click
"OK" to accept the service

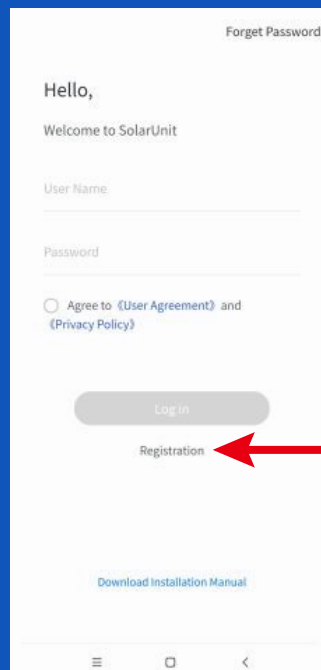

5.
Start using SolarUnit App
New users need to register an
account first

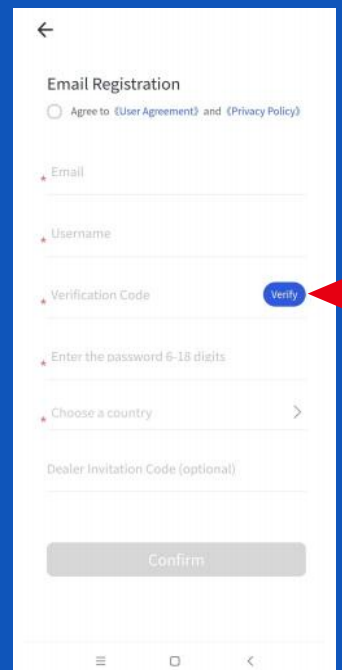

6.
Enter your email address and user
name (for login) and click "Verify".
The verification code will be sent to
your email

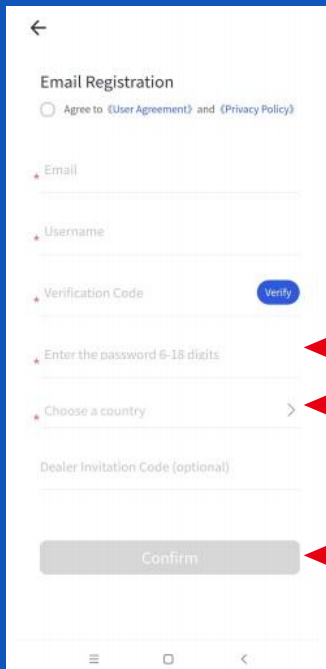

←

Email Registration

☐ Agree to 《User Agreement》 and 《Privacy Policy》

* Email

* Username

* Verification Code


* Enter the password 6-18 digits

* Choose a country >

Dealer Invitation Code (optional)

7.

Enter the received verification code
Set a password
Enter the country and dealer invitation code
Click "Confirm" to complete registration

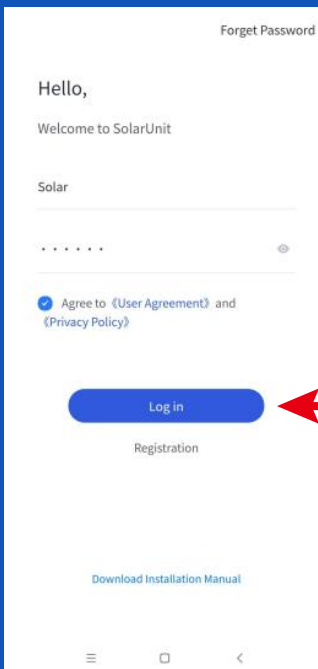

Forget Password

Hello,

Welcome to SolarUnit

Solar

* * * * *


☒ Agree to 《User Agreement》 and 《Privacy Policy》

Registration

[Download Installation Manual](#)

8.

After registration, return to the login interface and enter the user name and password set in steps 6 and 7 to log in (note that the user name is not your email address).

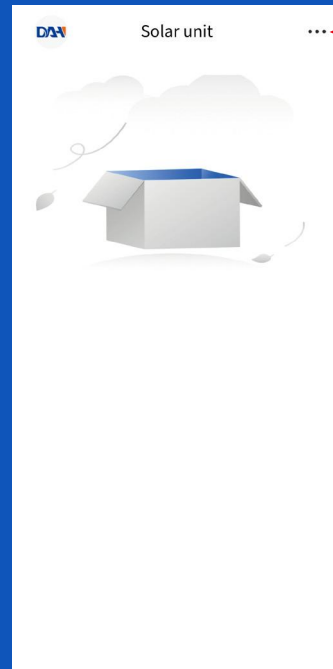


DAH Solar unit

...

9.

Login complete
Start creating a power station
Click the three dots at the top right corner

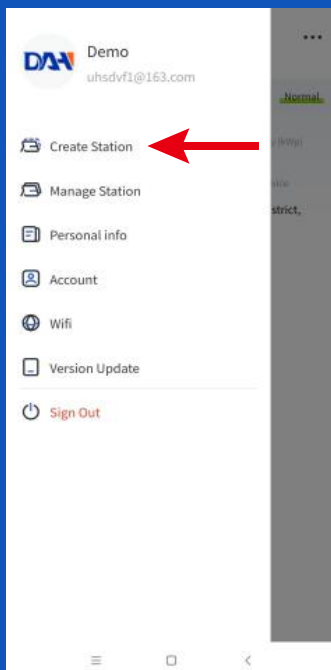

DAH Demo

uhsdvf1@163.com

...

Create Station

Manage Station

Personal info

Account


Wifi

Version Update

Sign Out

10.

Select "Create Station" from the menu that pops up on the left

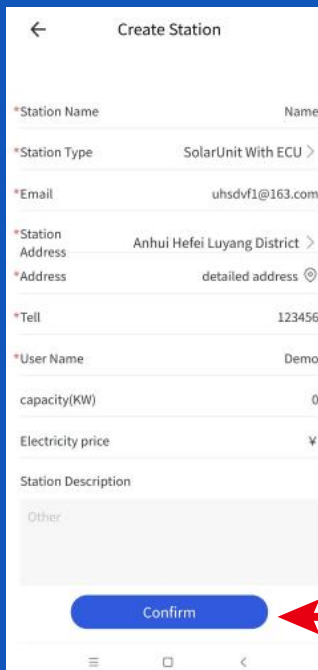

← Create Station

* Station Name Name

* Station Type SolarUnit With ECU >

* Email uhsdvf1@163.com

* Station Address Anhui Hefei Luyang District >

* Address detailed address

* Tell 123456

* User Name Demo

capacity(KW) 0


Electricity price ¥

Station Description

Other

11.

Fill in the information
Fields with an asterisk are required
Click "Confirm"

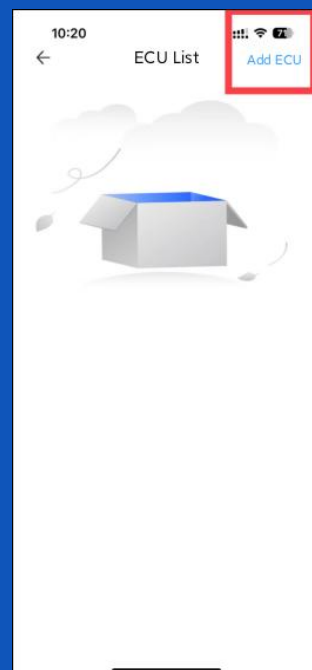

10:20


← ECU List

...

Add ECU

12.

Add ECU for monitoring data
Click "Add ECU" at the top right

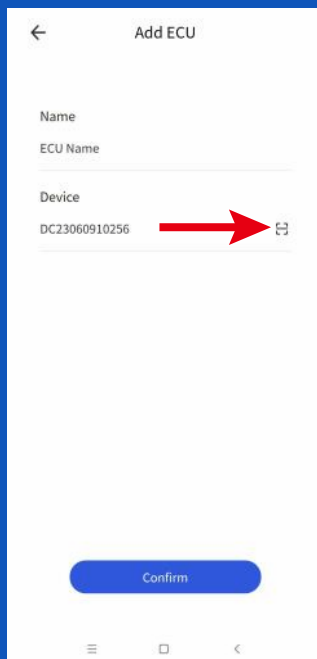


13.

Give your ECU a name
The communication device is a serial number affixed to the label on the ECU
You can also scan the QR code directly on the label
Click "Confirm"




14.

Click ">"

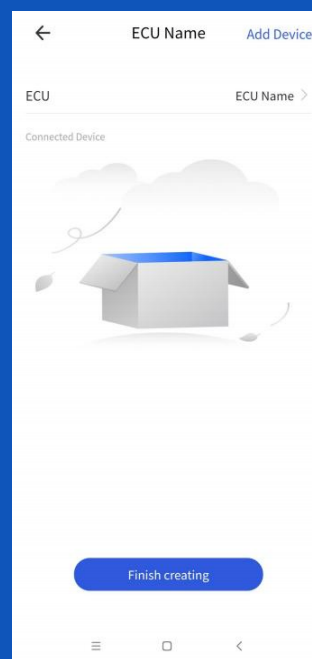


15.

Click "Add Device" at the top right corner

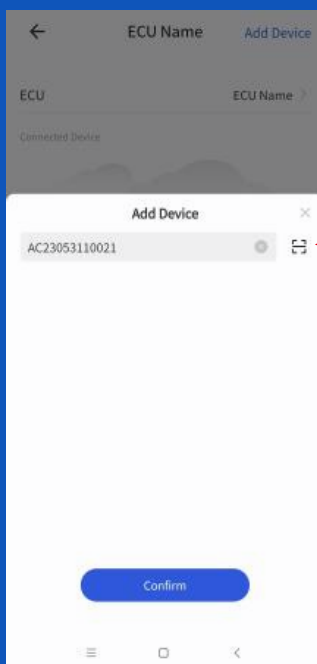

16.


Enter the label code attached to the side of the inverter
or scan the QR code to fill in automatically
Click "Confirm"

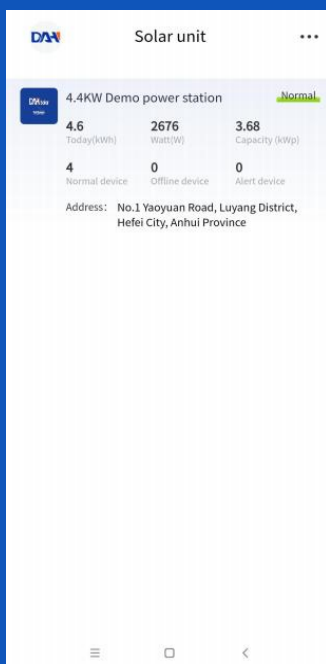

17.


All the steps to create the station are complete

configure the network for the ECU

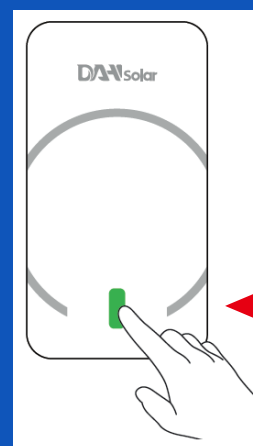


18.

When the blue light is flashing, press and hold (5s) the LED light on the ECU until the red and green lights are flashing alternately

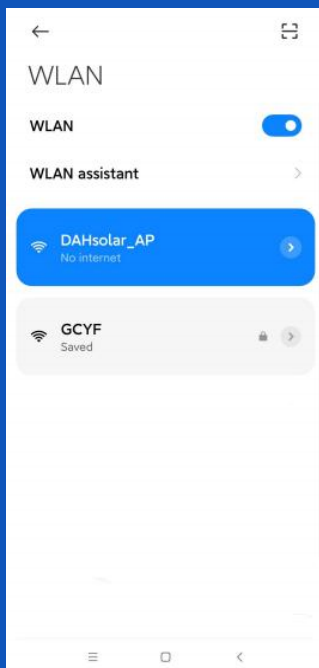


19.

Connect to the ECU hotspot
"DAHsolar_AP".
No password required

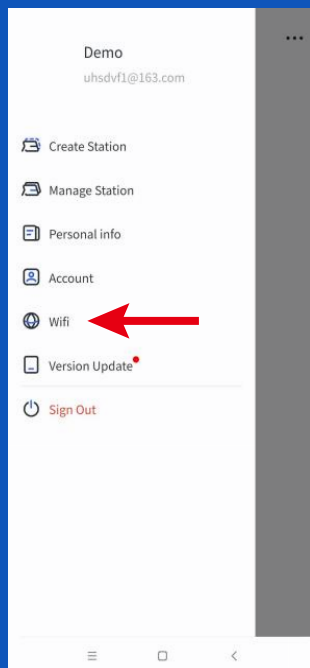


20.

Open the APP again
Click the three dots in the top right corner of the home page
Select "Wifi" from the menu
which pops up on the left

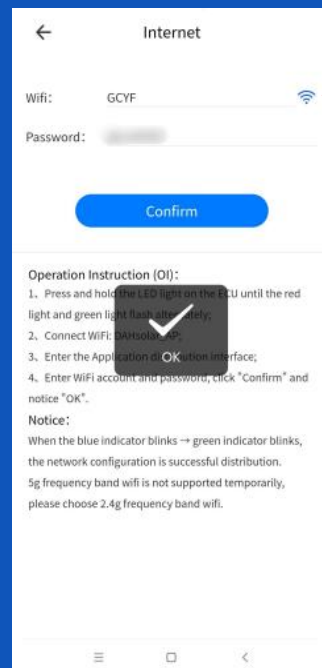

21.

Enter your home WIFI name and
password
Click "Confirm"
The window "OK" is displayed. The
network distribution is successful

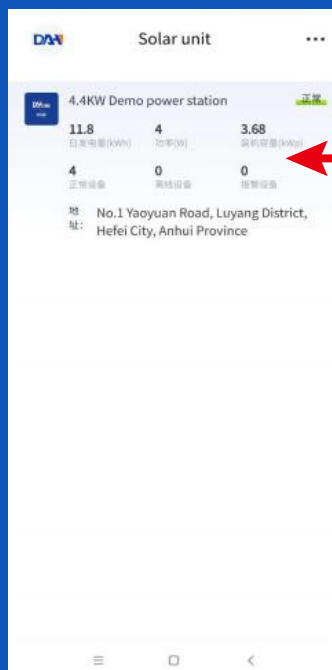


22.

When all is finished, you can check
the status of the power station
Click the power station




23.

Select "Device"
When the connection is successful,
all devices are marked green

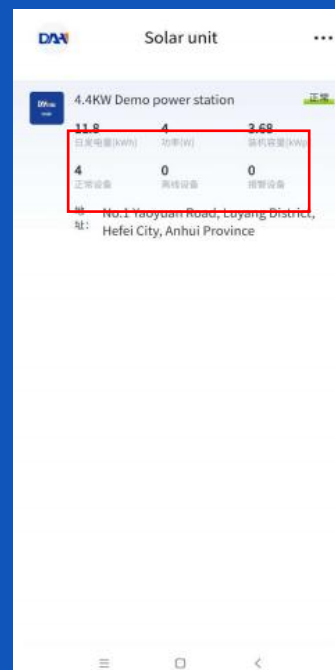

24.


After the line is connected, you
can see the data for a while

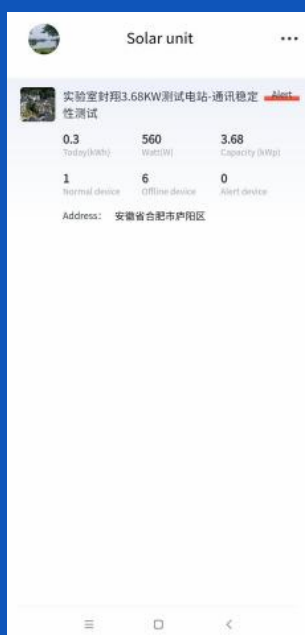

1.

Click the three dots at the top right corner of the home page

【The picture shows "Alert" because this is a demonstration station. Don't worry】

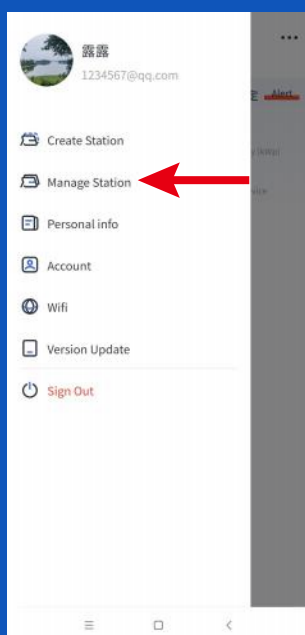


2.

Click the three dots in the top right corner of the home page
Select "Manage Station" from the menu which pops up on the left




3.

Click "On/Off" directly

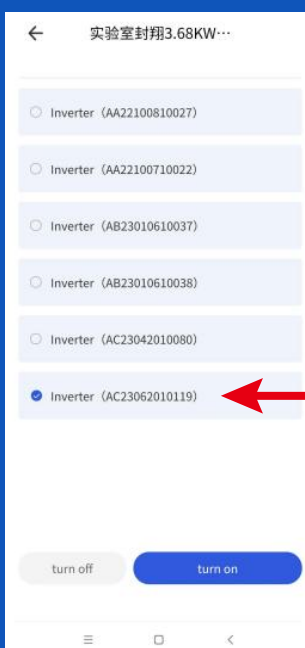


4.

Find the inverter that needs power limiting
Check it and click "Turn Off"

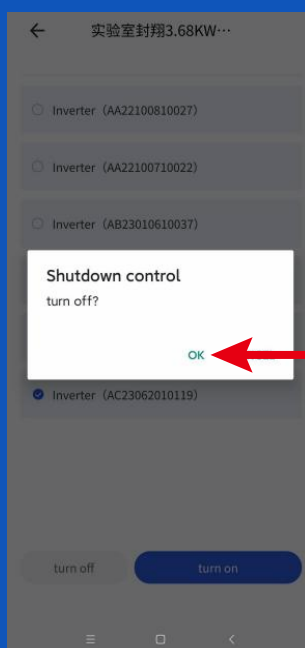

5.

Click "OK" to confirm the shutdown

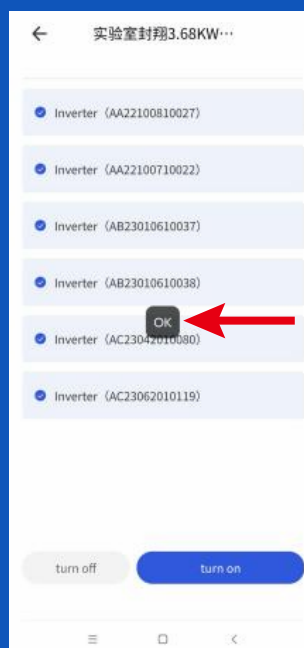


6.


Successful operation
The ECU indicator changes from green to red




7.
Return to "Manage Station"
interface

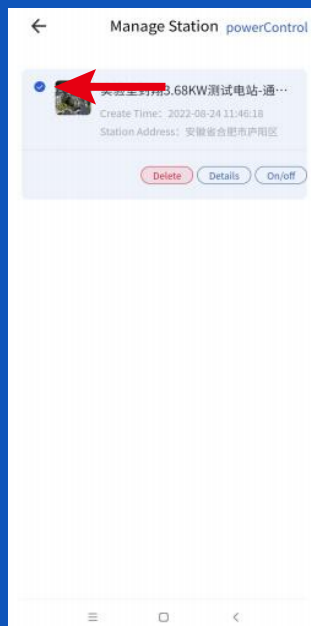

8.
Check the station
Click "Power Control" at the top
right corner

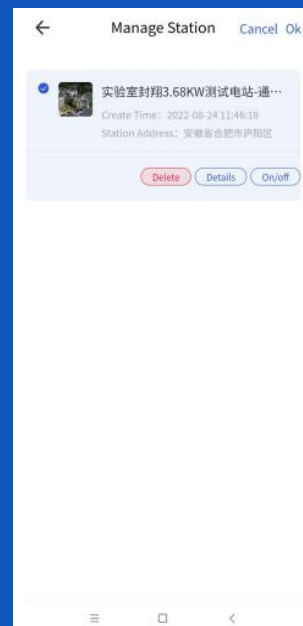


9.
Click "Ok"

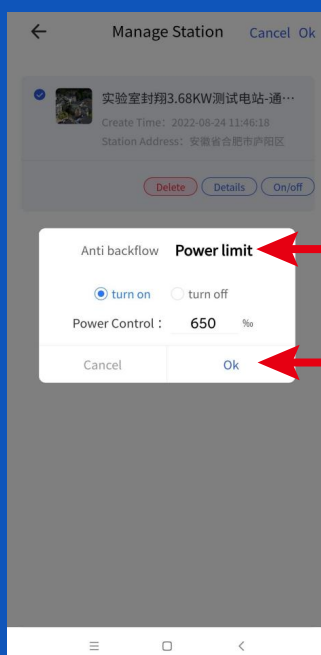


10.
Choose "Power limit"
Set Power "650"(Represents 650%)
Click "Ok"


【For example, limit the inverter output power from 920W to 600W, 600 920*650%】
【The power can be set as required】

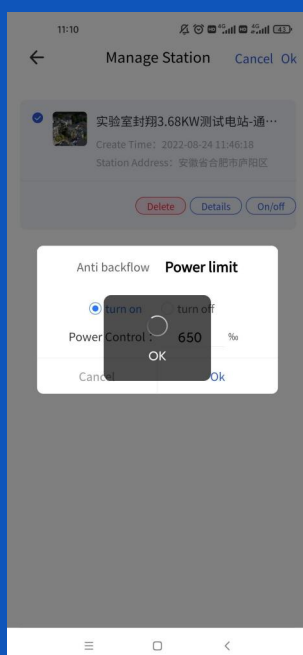

11.
operate successfully

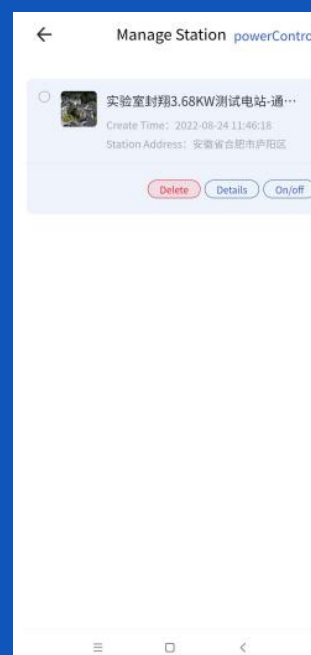


12.
Click "On/Off" directly

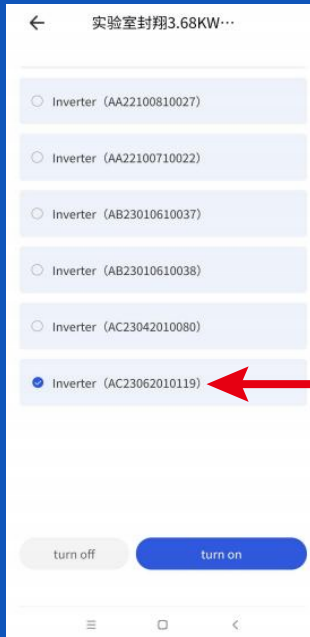

13.

Find the inverter that needs power limiting
Check it and click "Turn On"

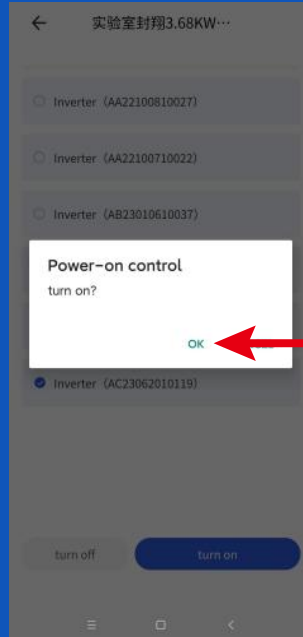

14.

Click "OK"



15.

The ECU indicator changes from red to green
Power limiting Procedure Complete